

AM.5.VS		
CVS.20	BFP CARTRIDGE CATALOGUE	
SCREWS AND STUDS	CH. IV PAGE 36	

AM.5.VS... MODULAR PRESSURE SEQUENCING VALVES CETOP 5


The sequence valve are used to assure that a secondary circuit is pressurized when the setting pressure with a changing flow to up 90 l/min (see diagram).

Three spring types allow adjustment within the range 7 ÷ 250 bar. Manual adjustment is available by a grub screw or plastic knob.


The cartridge used is the "CVS" type.


OP 3		fluid power
Max. operating pressure		350 bar
Setting ranges:	spring 1	60 bar
	spring 2	120 bar
	spring 3	250 bar
Max. flow		90 l/min
Draining on port T		0,5 ÷ 0,7 l/min
Hydraulic fluids	Mine	eral oils DIN 51524
Fluid viscosity		10 ÷ 500 mm²/s
Fluid temperature		-25°C ÷ 75°C
Ambient temperature		-25°C ÷ 60°C
Max. contamination lev	el clas	s 10 in accordance
with NAS 1638 with filter B₂₅≥75		
Weight		3,73 Kg

🖌 👝 brevini

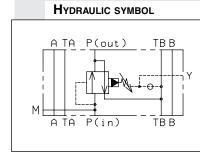




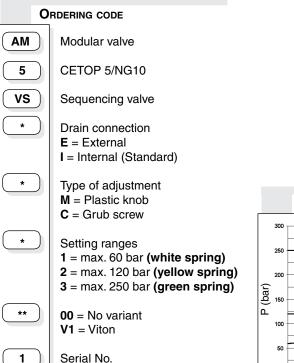

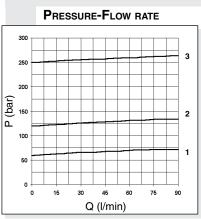

OVERALL DIMENSIONS max 197 24 00 М СН 5 `CН 17 OR 2-014/90 max 61.5 4.5 131 46 69 02 20.6 Type of adjustment 70 48 Support plane 0.03 M Plastic knob 54 specifications C Grub screw

MINIMUM SETTING PRESSURE

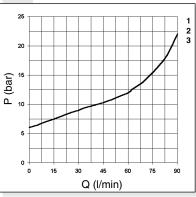

Curves n° 1 - 2 - 3 = setting ranges

The fluid used is a mineral oil with a viscosity of 46 mm²/s at 40°C. The tests have been carried out a fluid temperature of 50°C.

To change valves AM.5.VS... from internal to external drainage it is necessary:

- screw out the plug on the Y port
- screw out the plug T.C.E.I. M8x1 from the body
- screw in a screw S.T.E.I. M6
- rescrew the T.C.E.I. M8x1 plug on the body

NOTE: the external draining can be used as a piloting line (please, contact our Technical Service for other informations)

File: AM5VS001 E