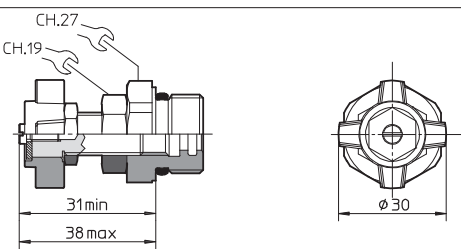
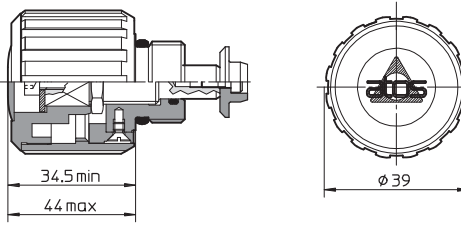
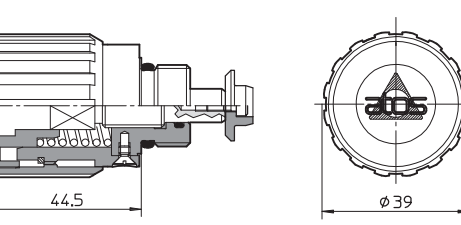
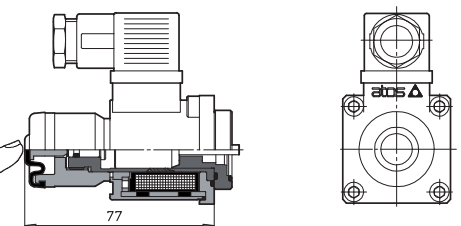
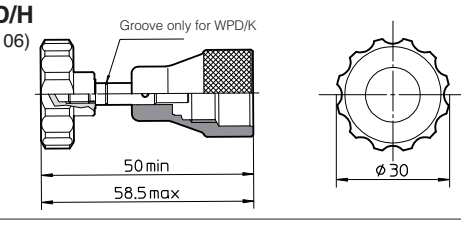
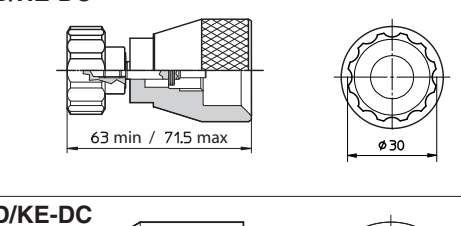
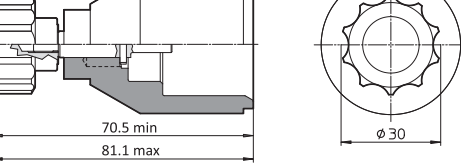
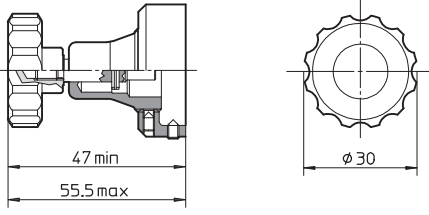
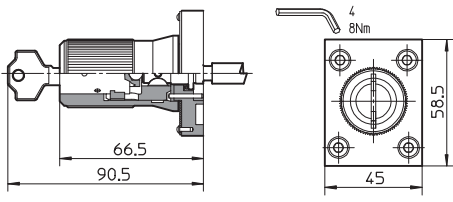
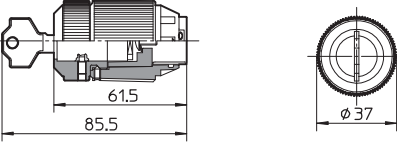
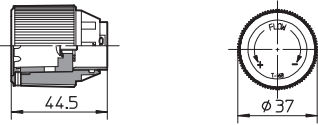
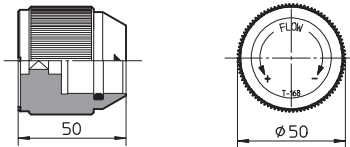


Handwheels for hydraulic controls

on-off and proportional valves

| | OPTIONS CODES AND DIMENSIONS | FEATURES | VALVE TYPE |
|------------|--|---|---|
| OPTION | <p>/V</p>  | Regulating handwheel | ARE, CART ARE, CART M-6, ARAM, AGAM, REM, AGIR, AGIS, AGIU, HMP, HM, KM, HS, KS, HG, KG, LIMM, LIRA, LICM |
| OPTION | <p>/VF</p>  | Regulating knob | ARE, CART ARE, CART M-6, AGIS, AGIU (as spare part, code VFG instead of VF and VSG instead of VS), HMP, HS, HG. |
| OPTION | <p>VS</p>  | Manual override with safety locking. Regulation possible only with pushed knob. | ARE, CART ARE, CART M-6, AGIS, AGIU (as spare part, code VFG instead of VF and VSG instead of VS), HMP, HS, HG. |
| OPTION | <p>/WP</p>  | Prolonged manual override protected by rubber cap | DHI DKE DLOH, DLOK DPHI LID The option /WP is standard for DHO, DPHO |
| SPARE PART | <p>WPD/H (size 06)</p> <p>Groove only for WPD/K</p>  | | DHI |
| SPARE PART | <p>WPD/HE-DC</p>  | Manual override with detent, for mechanical operation and fixed actuation of spools | DHE (only DC version) |
| SPARE PART | <p>WPD/KE-DC</p>  | | DKE-DC |

| | OPTIONS CODES AND DIMENSIONS | FEATURES | VALVE TYPE |
|------------|---|--|-------------------------------------|
| SPARE PART | <p>WPD/Z</p>  | Manual override with detent, for mechanical operation and fixed actuation of spools. Only for open-loop valves. | DHZO, DKZOR, DPZO, QVHZO, QVKZOR |
| OPTION | <p>/K</p>  | | DHQ, DKQ QV-06, |
| OPTION | <p>/K</p>  | Lock key for the setting knob | LIQV |
| OPTION | <p>/G</p>  | | HQ, KQ, JPQ-2 |
| OPTION | <p>/G</p>  | Adjustment by graduated micrometer | JPQ-3 |