
JMPVAZ - JMPVD Electronic remote voltage control unit



JMPVAZ joystick is a strong and compact device, whose ergonomic shape is handily organised.

The person present system switch and many other remote control functions can be implemented and operated conveniently. It is developed to meet mobile machinery market requirements, where it is increasingly important to handle the power transmission supply with integrated remote control.

JMPVAZ is simple to fit and replace and is made up of a standard module with two proportional axes and a hand grip that can house several combinations of other proportional axes (up to 4) and ON/OFF outputs.

This joystick allows all the electronic features of ramp generator function, electronic flow adjustement, and dead band compensation (only for proportional axes).

ORDERING CODE

JMPVAZM800

Y

Z


W

	ON/OFF push buttons	0	1	2	3	4	5	6
No. of switches in the hand grip side								


	Z axis position	0 none	H horizontal	L left	R right	B both (L+R)
---	-----------------	-----------	-----------------	-----------	------------	-----------------

	Additional ON/OFF push buttons	0 none	T Top	D person present system	B both (T+D)
---	--------------------------------	-----------	----------	----------------------------	-----------------

ON/OFF push buttons (Y)
and Z axis position (Z)

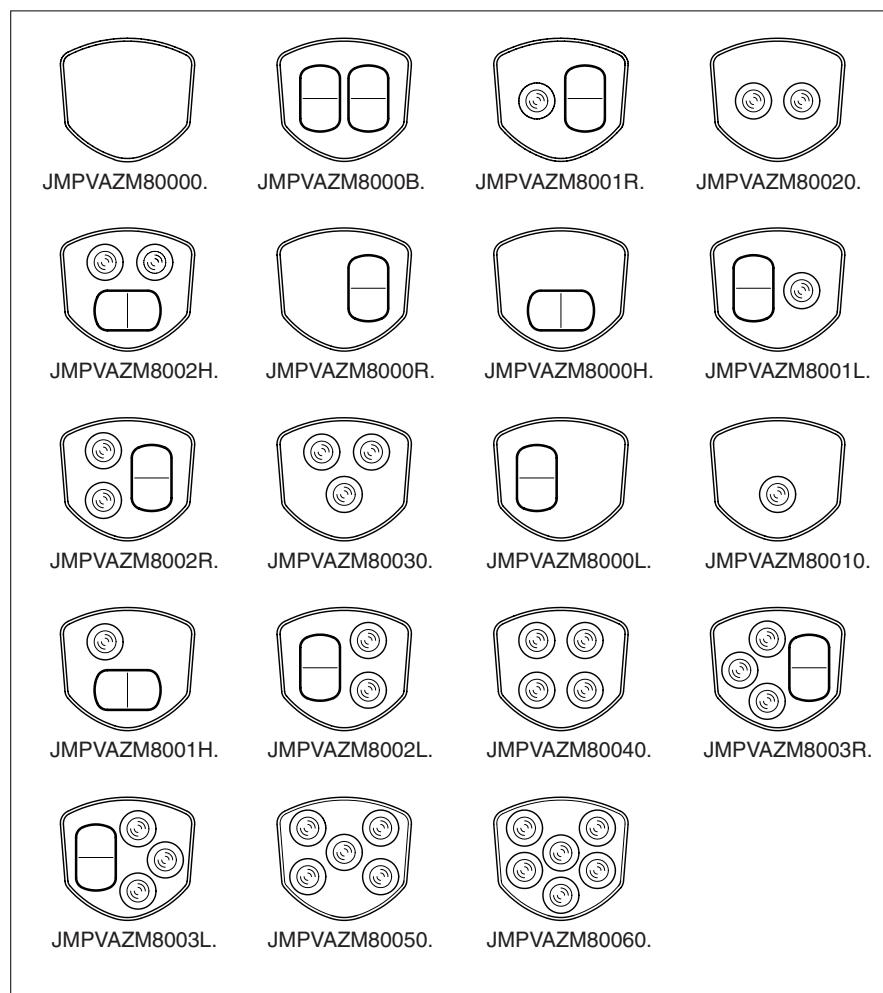



Additional ON/OFF push
buttons (W)

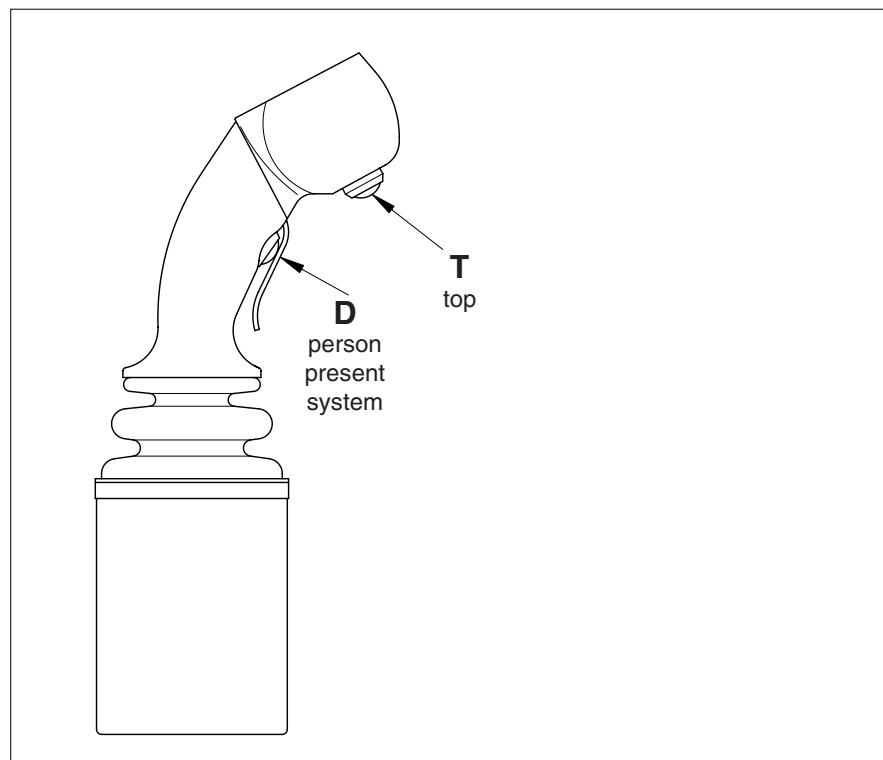

Dimensions and electrical details

JMPVAZM8002RD

- 2 ON/OFF push buttons in hand grip side
- Z axis in right position
- person present system push button

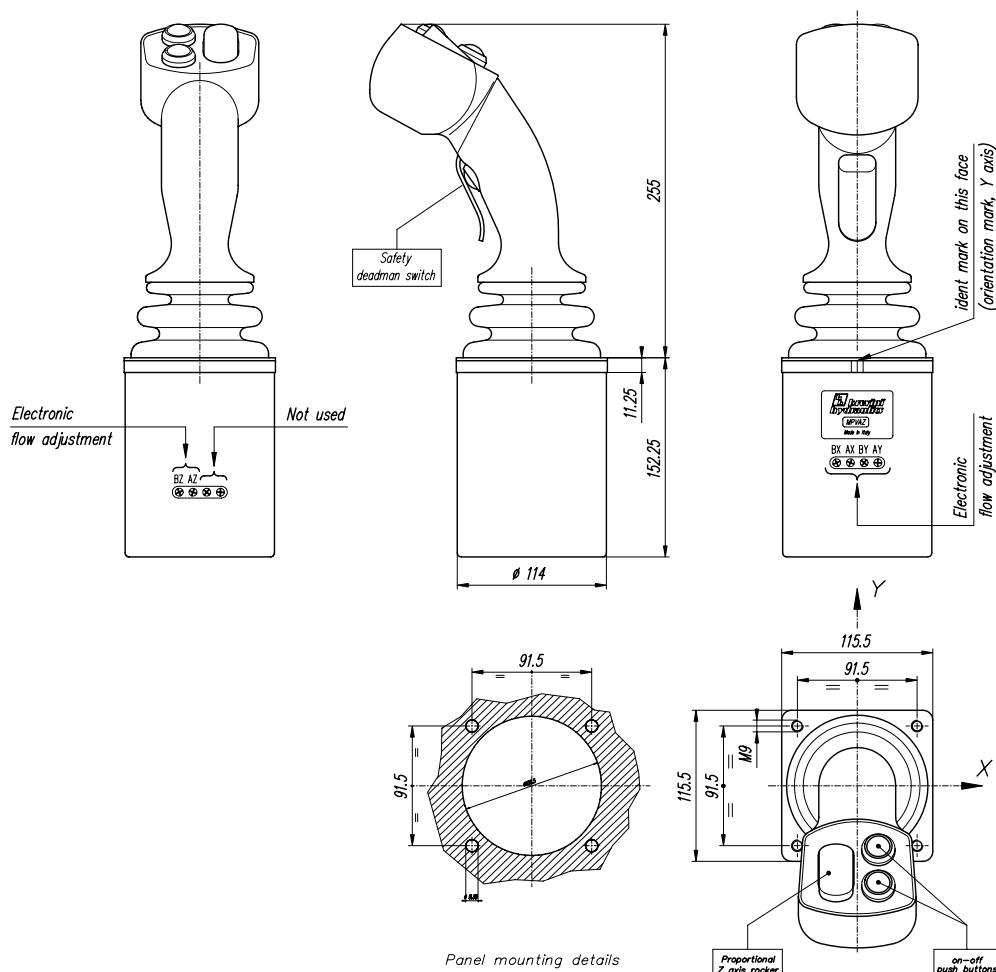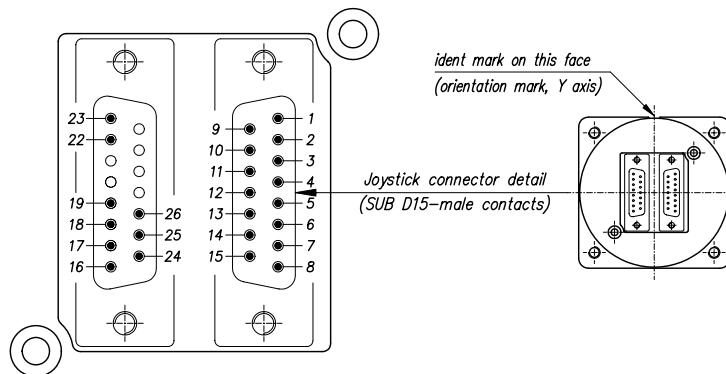

1 = Negative supply voltage
 2 = Negative signal
 3 = X axis output +
 4 = US+ (Safety system output)
 5 = US- (Safety system output)
 6 = Y axis output +
 7 = Positive signal control
 8 = Positive supply voltage
 9 = "A" port, directional output (max. load 30 mA), X axis
 10 = "B" port, directional output (max. load 30 mA), X axis

11 = Signal control, X Axis
 12 = (free)
 13 = Signal control, Y Axis
 14 = "B" port, directional output (max. load 30 mA), Y axis
 15 = "A" port, directional output (max. load 30 mA), Y axis
 16 = Negative supply voltage
 17 = Negative signal
 18 = Z axis output +
 19 = (free)
 20 = US+ on-off output (max. load 30 mA)


21 = US- on-off output (max. load 30 mA)
 22 = Positive signal control
 23 = Positive supply voltage
 24 = "A" port, directional output (max. load 30 mA), Z axis
 25 = "B" port, directional output (max. load 30 mA), Z axis
 26 = Signal control, Z Axis
 27 = (free)
 28 = (free)
 29 = (free)
 30 = (free)

Electrical system

In order to verify if the hook-up is correct, please proceed as follows:

- 1) By touching with the multimeter the pin no. 1 and the pin "ground" (⏚), the tension voltage supply (UDC) must be read.
- 2) By touching with the multimeter the pin no. 2 and the pin "ground" (⏚), half of the tension voltage supply (50% UDC) must be read, with joystick in neutral position and if the hookup keeps the module (MHPED/MHPOD) switched on.
- 3) With multimeter in the same position as per point 2), by moving the joystick the signal control must be 25% of UDC on one side and 75% UDC on the other side




The methods of control and the parameters as per points 1), 2), 3) are the same for all kinds of our joysticks.

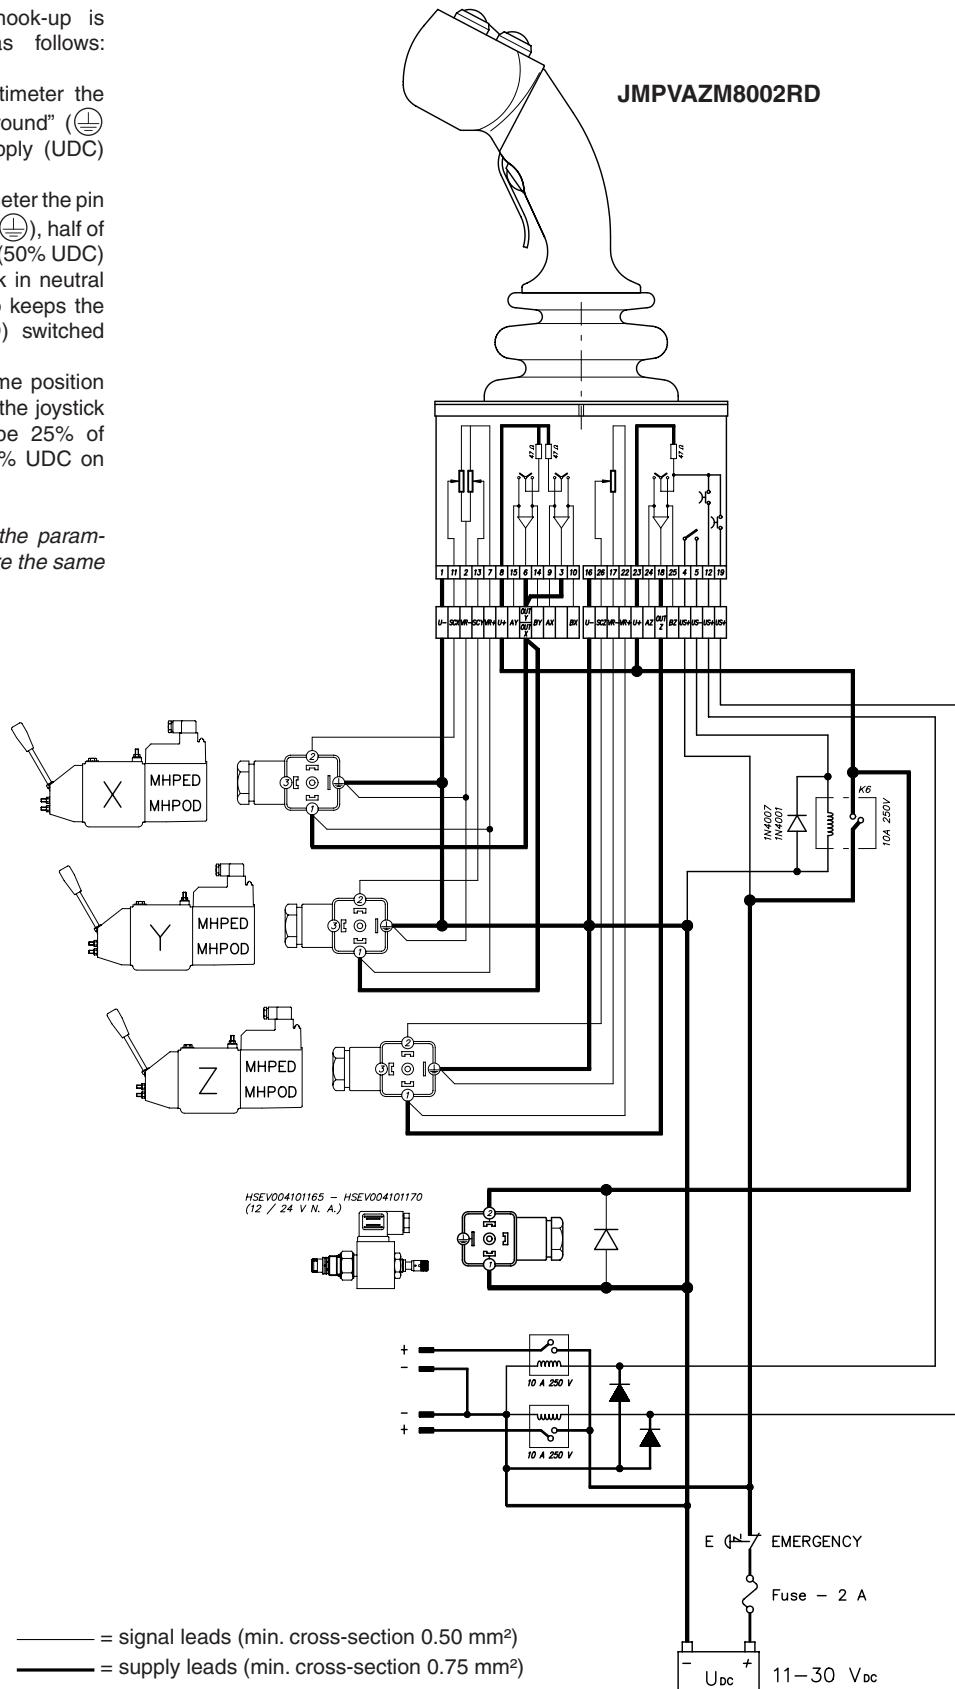

Dimensions and electrical details

JMPVAZM8000LD

- NO push buttons in hand grip side
- Z axis in left position
- person present system push button

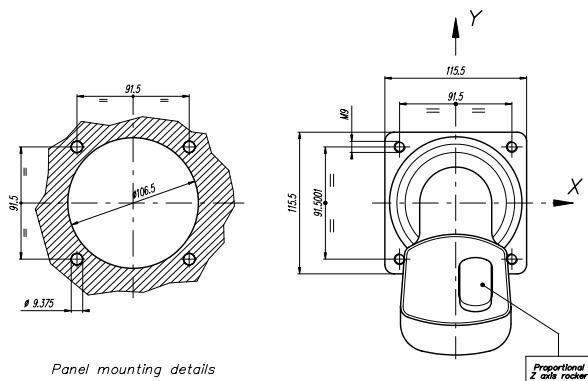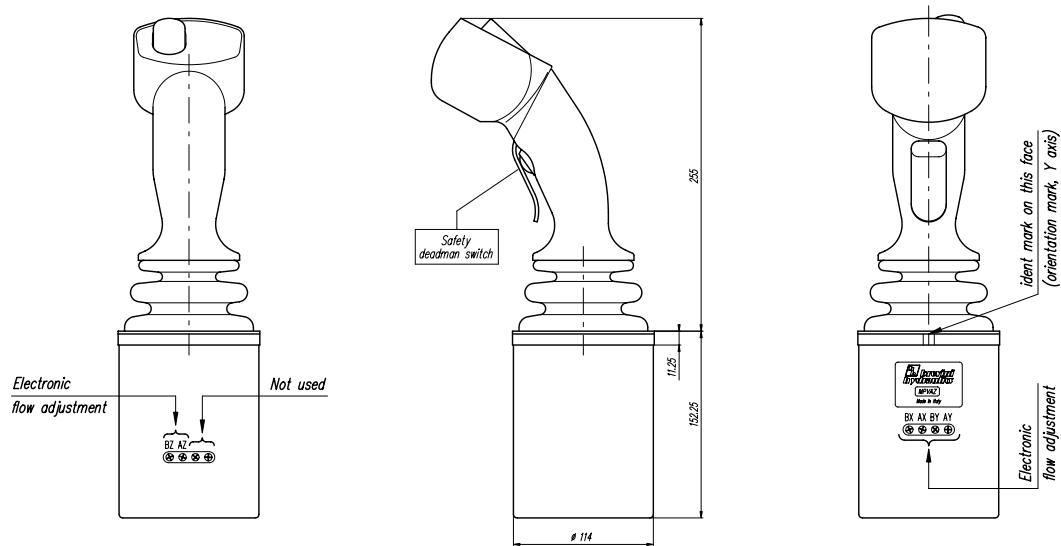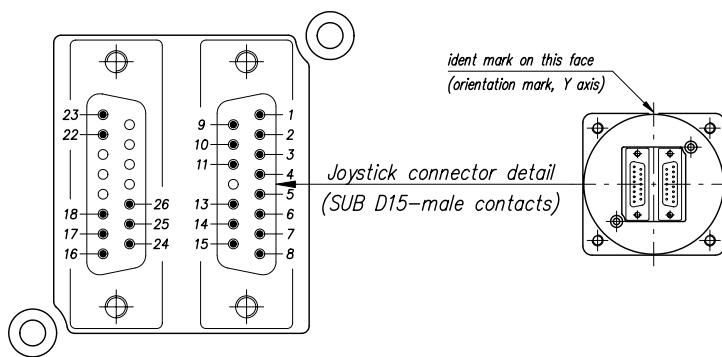


- 1 = Negative supply voltage
- 2 = Negative signal
- 3 = X axis output +
- 4 = US+ (Safety output)
- 5 = US- (Safety output)
- 6 = Y axis output +
- 7 = Positive signal control
- 8 = Positive supply voltage
- 9 = "A" port, directional output (max. load 30 mA), X axis
- 10 = "B" port, directional output (max. load 30 mA), X axis

- 11 = Signal control, X Axis
- 12 = (free)
- 13 = Signal control, Y Axis
- 14 = "B" port, directional output (max. load 30 mA), Y axis
- 15 = "A" port, directional output (max. load 30 mA), Y axis
- 16 = Negative supply voltage
- 17 = Negative signal
- 18 = Z axis output +
- 19 = (free)
- 20 = (free)

- 21 = (free)
- 22 = Positive signal control
- 23 = Positive supply voltage
- 24 = "A" port, directional output (max. load 30 mA), Z axis
- 25 = "B" port, directional output (max. load 30 mA), Z axis
- 26 = Signal control, Z Axis
- 27 = (free)
- 28 = (free)
- 29 = (free)
- 30 = (free)

Electrical system

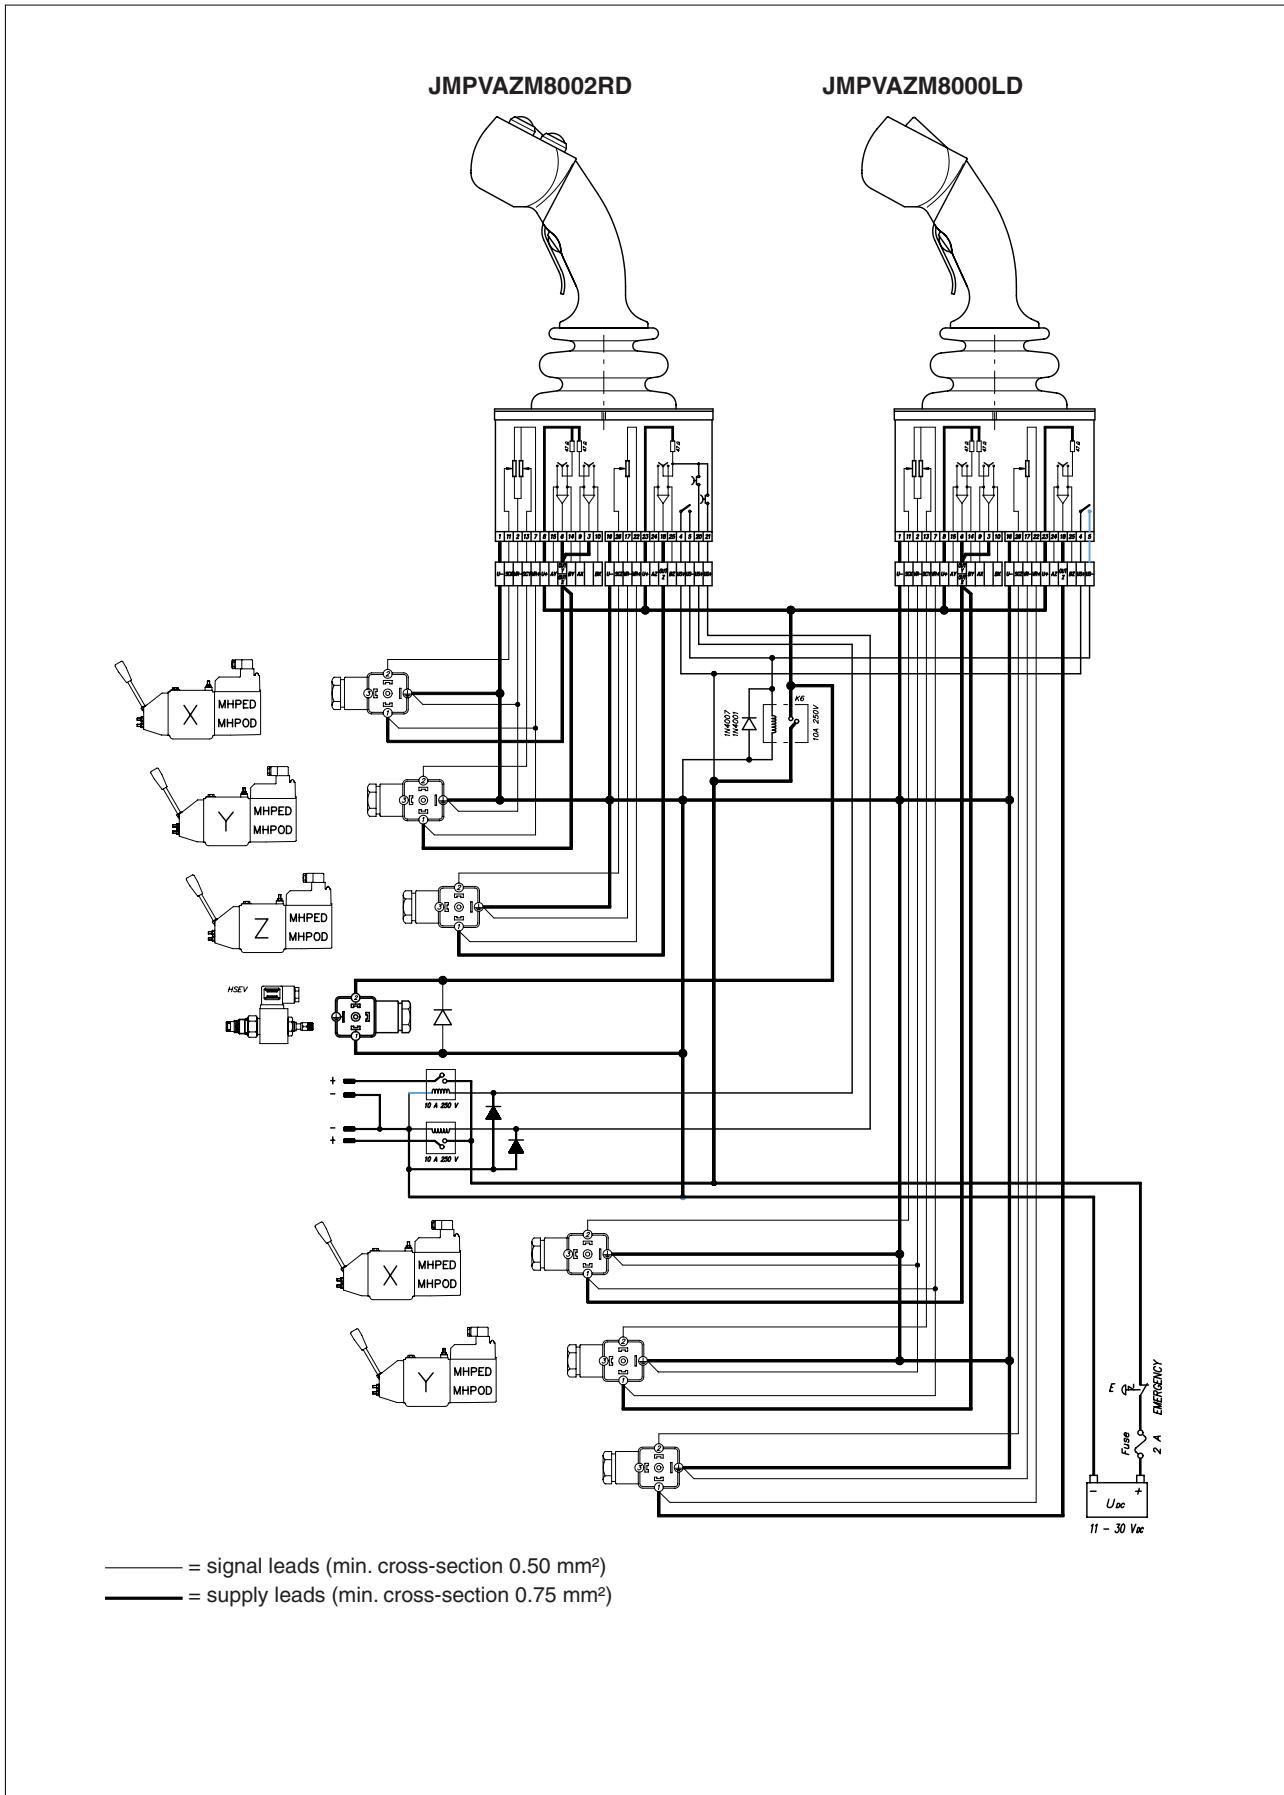


JMPVD joystick is a strong and compact device, whose ergonomic shape is handily organised.

The person present system switch and many other remote control functions can be implemented and operated conveniently. It is developed to meet mobile machinery market requirements, where it is increasingly important to handle the power transmission supply with integrated remote control.


JMPVD is simple to fit and replace and is made up of a standard module with two proportional axes and a hand grip that can house several combinations of other ON/OFF outputs.

This joystick allows all the electronic features of ramp generator function, electronic flow adjustement, and dead band compensation (only for proportional axes).


K handle
(no switch)

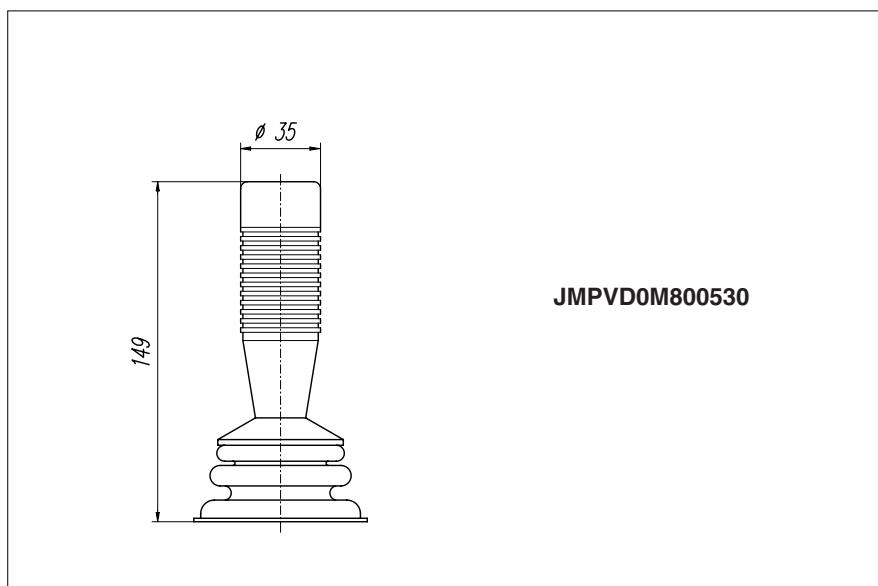

H handle
(rocker switch)

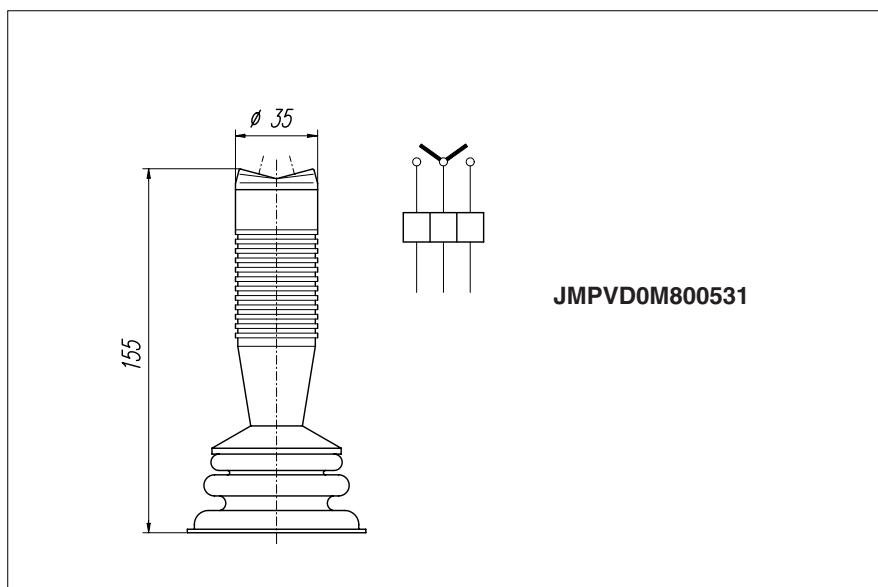


L handle
(person present system switch)

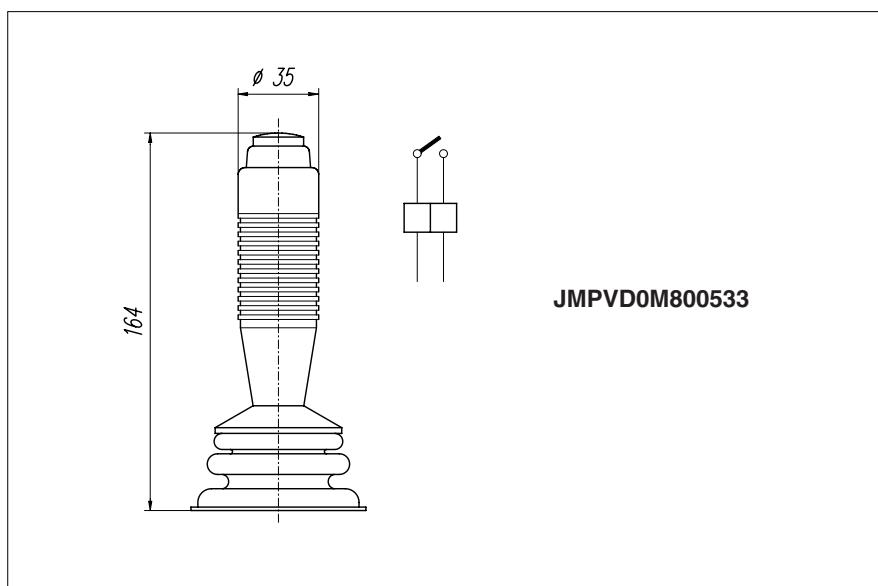



Dimensions and electrical details

"K" Handle (no switch)
JMPVD0M800530

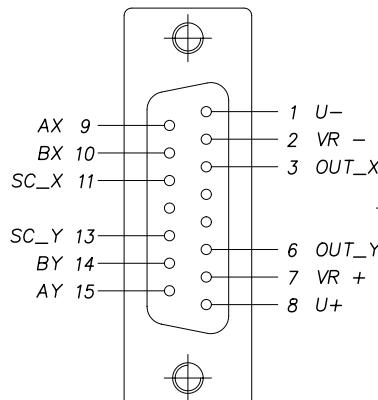


- 1 = Negative supply voltage
- 2 = Negative signal
- 3 = X axis signal control
- 4 = (free)
- 5 = (free)
- 6 = Y axis output +
- 7 = Positive signal control
- 8 = Positive supply voltage
- 9 = "A" port, directional output (max. load 30 mA), X axis
- 10 = "B" port, directional output (max. load 30 mA), X axis
- 11 = Signal control, X Axis
- 12 = (free)
- 13 = Signal control, Y Axis
- 14 = "B" port, directional output (max. load 30 mA), Y axis
- 15 = "A" port, directional output (max. load 30 mA), Y axis


Joystick connector detail
(SUB D15-male contacts)

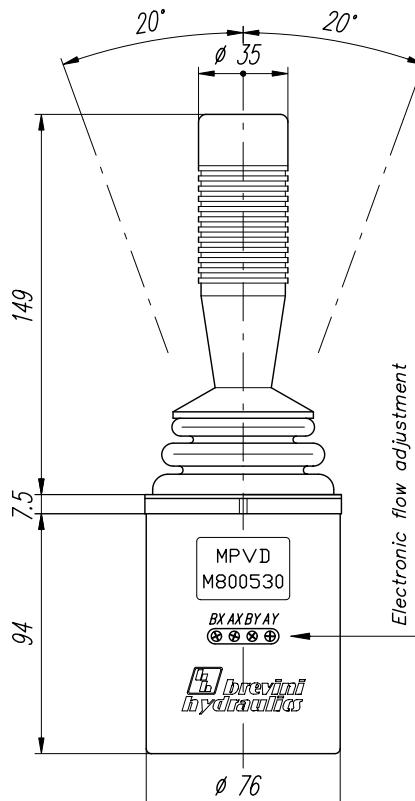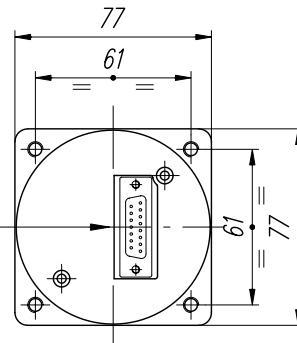

PANEL MOUNTING DETAILS

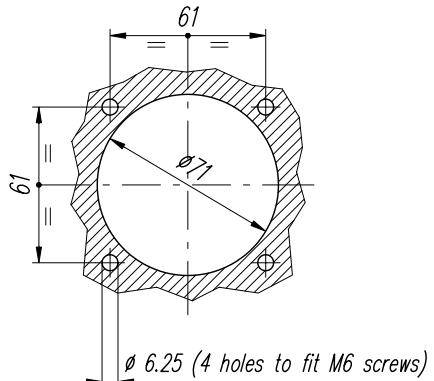


ident mark on this face
(orientation mark)

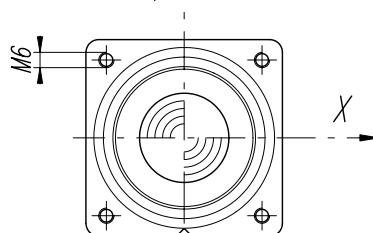

Electrical system


"K" Handle (no switch)
JMPVD0M800530

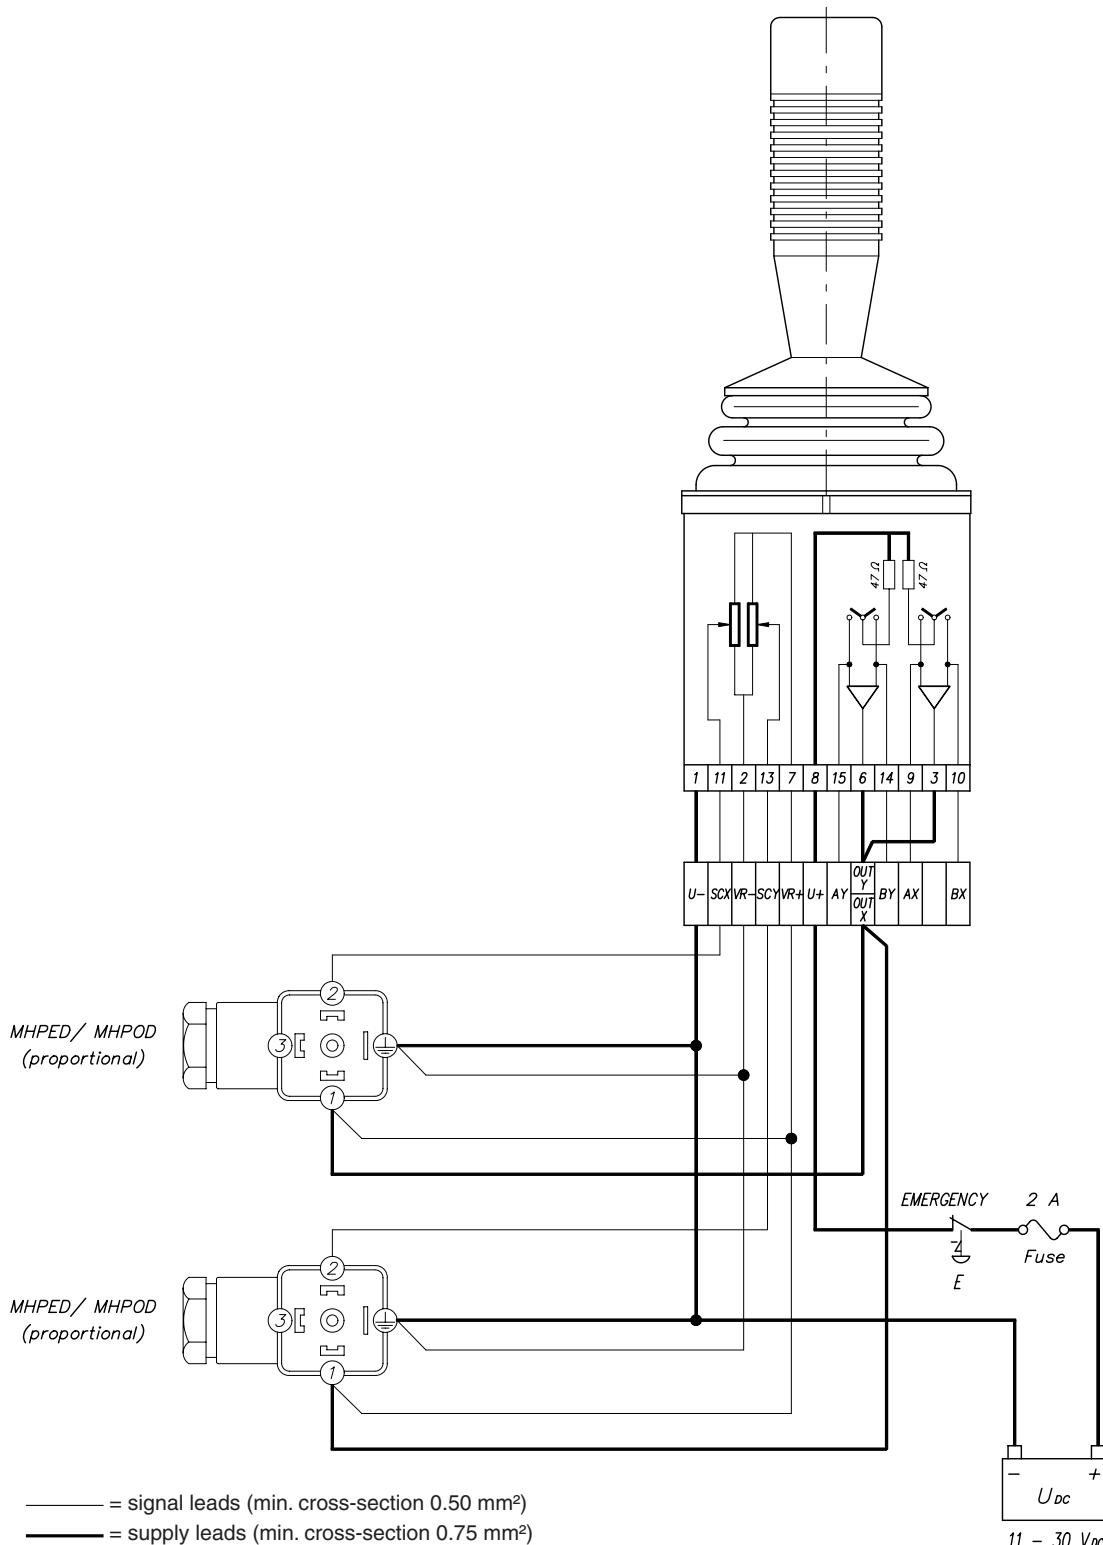



Dimensions and electrical details

"H" Handle (rocker switch)
JMPVD0M800531



- 1 = Negative supply voltage
- 2 = Negative signal
- 3 = X axis signal control
- 4 = Common terminal switch on/off/on
- 5 = Switch on (max. load = 50 mA)
- 6 = Y axis signal control
- 7 = Positive signal control
- 8 = Positive supply voltage
- 9 = "A" port, directional output (max. load 30 mA), X axis
- 10 = "B" port, directional output (max. load 30 mA), X axis
- 11 = Signal control, X Axis
- 12 = Switch on (max. load = 50 mA)
- 13 = Signal control, Y Axis
- 14 = "B" port, directional output (max. load 30 mA), Y axis
- 15 = "A" port, directional output (max. load 30 mA), Y axis

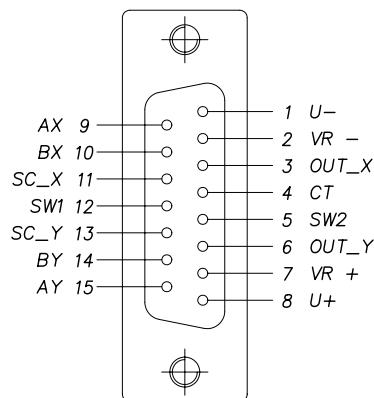

Joystick connector detail
(SUB D15-male contacts)

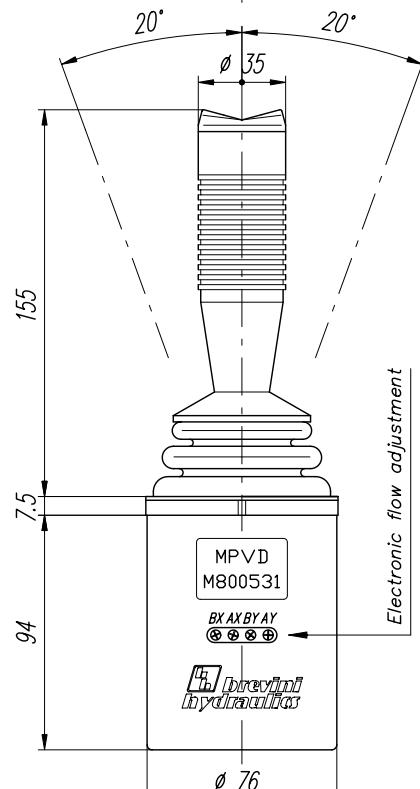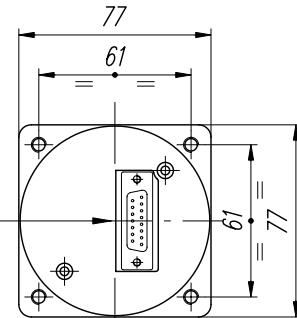


PANEL MOUNTING DETAILS

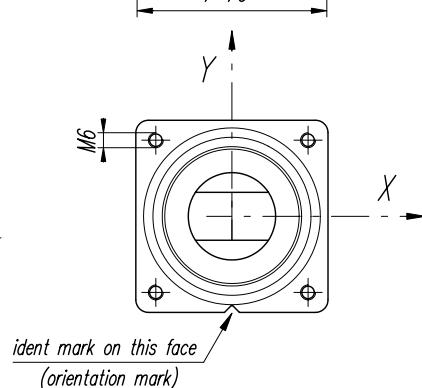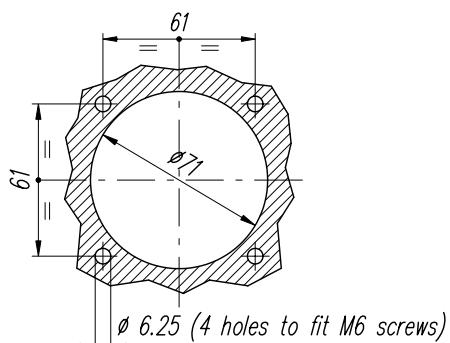

Electrical system


"H" Handle (rocker switch)
JMPVD0M800531

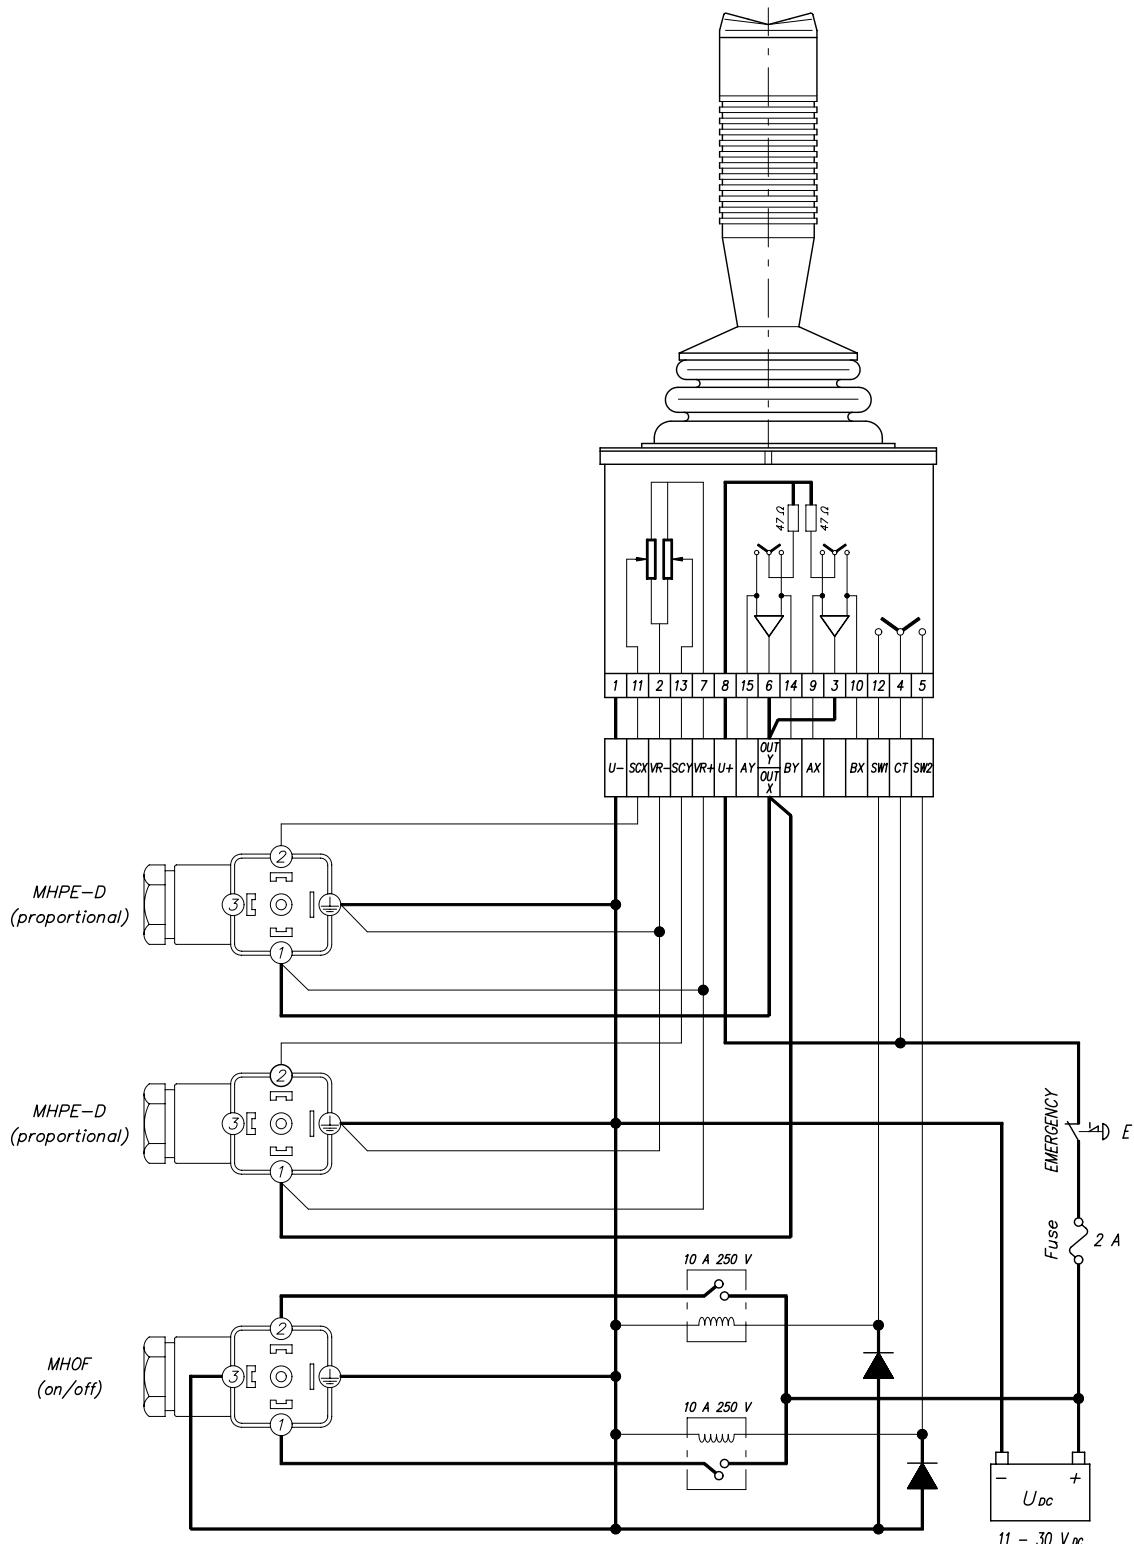


Dimensions and electrical details

"L" Handle (person present system switch)
JMPVD0M800533




- 1 = Negative supply voltage
- 2 = Negative signal
- 3 = Output X axis (+)
- 4 = Common terminal switch
- 5 = Switch on (max. load = 50 mA)
- 6 = Output Y axis (+)
- 7 = Positive signal
- 8 = Positive supply voltage
- 9 = "A" port, directional output (max. load 30 mA), X axis
- 10 = "B" port, directional output (max. load 30 mA), X axis
- 11 = Signal control, X Axis
- 12 = (free)
- 13 = Signal control, Y Axis
- 14 = "B" port, directional output (max. load 30 mA), Y axis
- 15 = "A" port, directional output (max. load 30 mA), Y axis

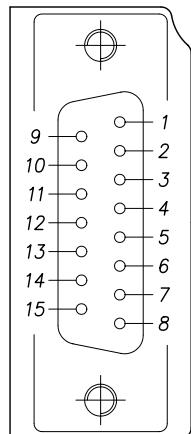

*Joystick connector detail
(SUB D15-male contacts)*

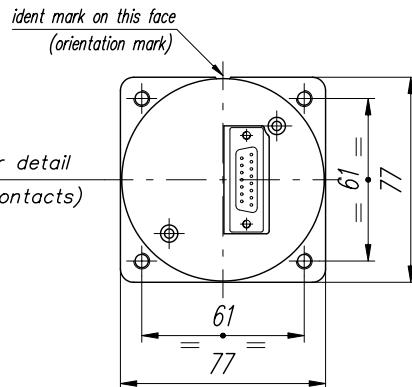


PANEL MOUNTING DETAILS

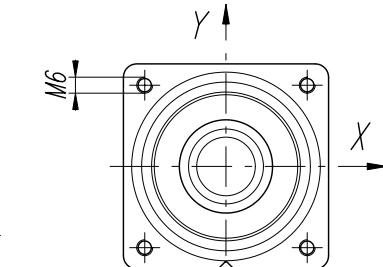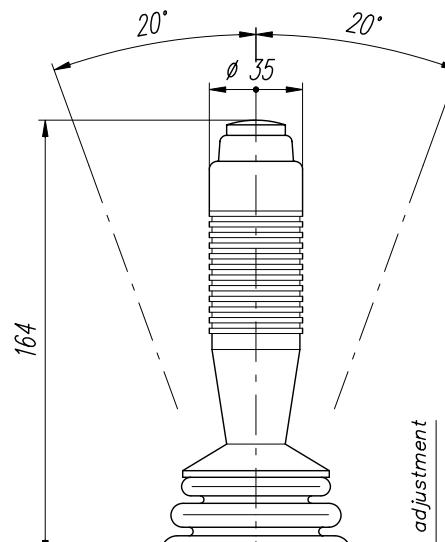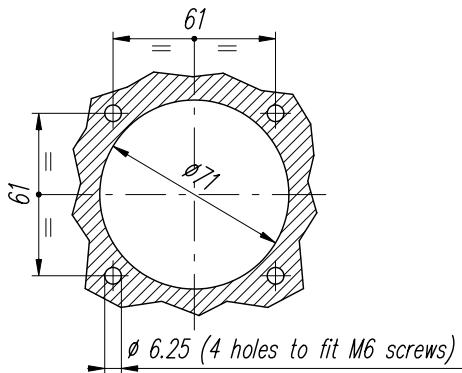

Electrical system

"L" Handle (person present system switch)
JMPVD0M800533

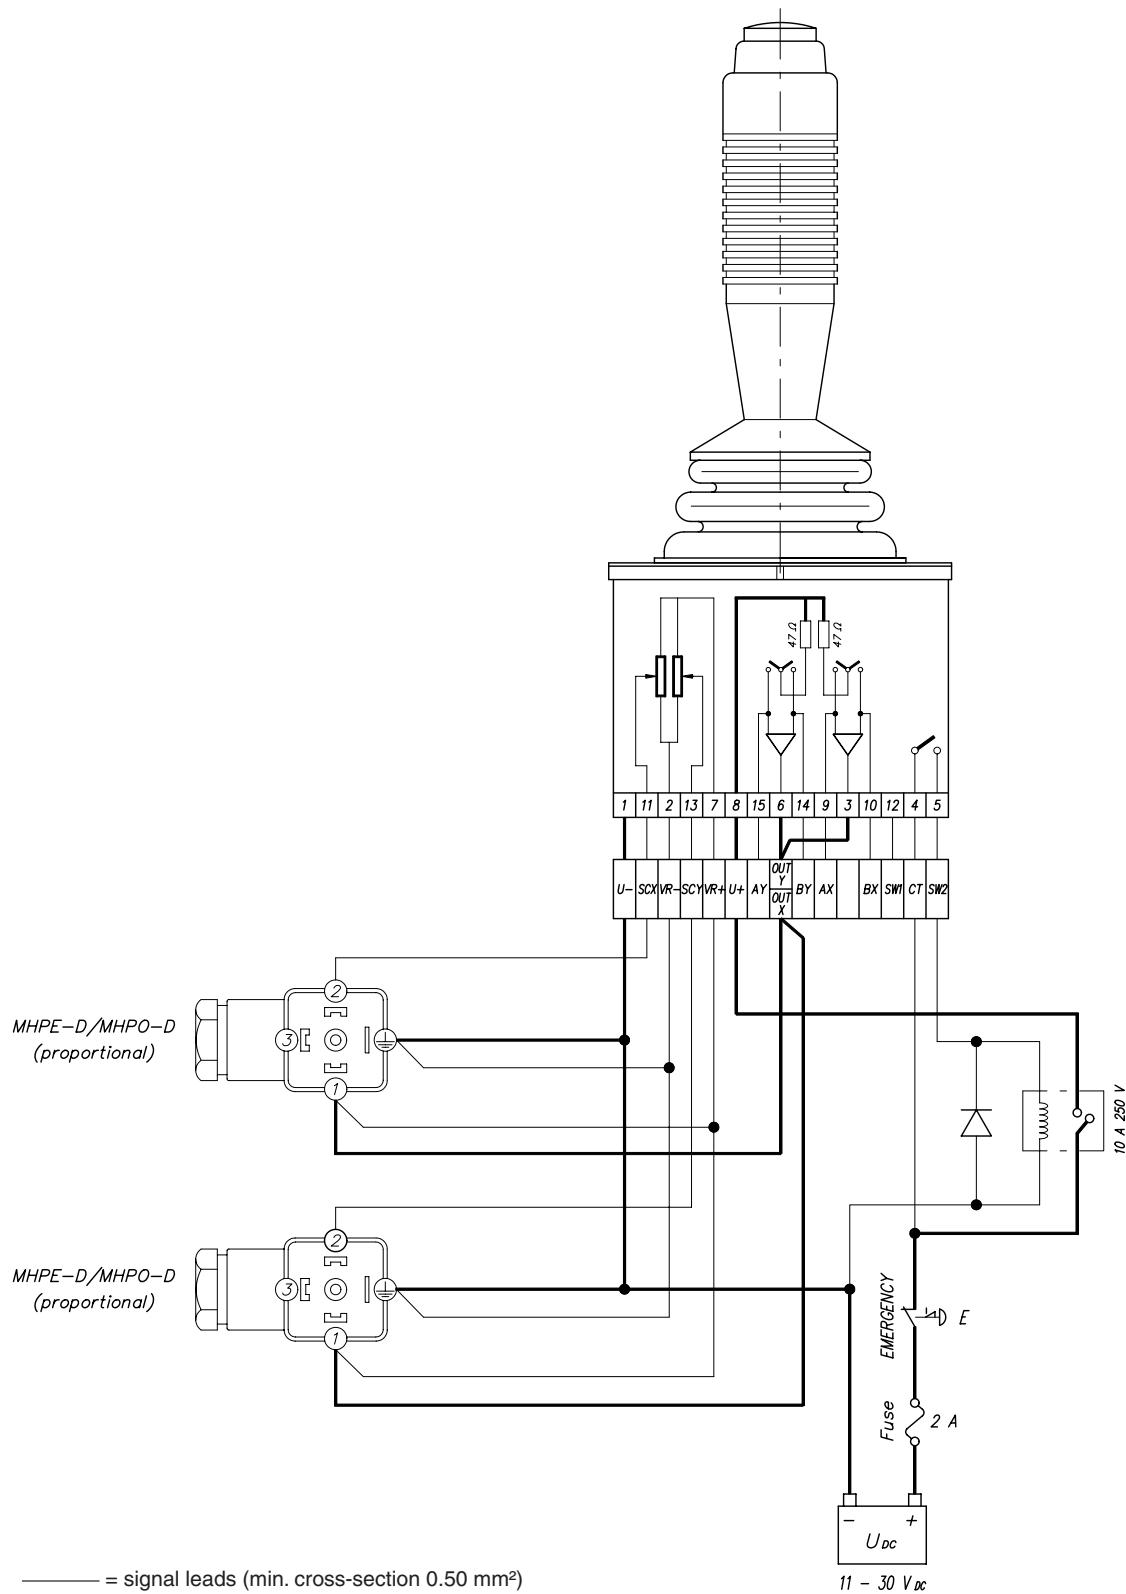



Factory:
Via Natta, 1
42100 Reggio Emilia - Italy
Tel. +39 0522 50585
Fax +39 0522 505856
www.aron.it



Via Natta, 1
42100 Reggio Emilia - Italy
Tel. +39 0522 748700
Fax +39 0522 748750
www.brevinifluidpower.com
sales.ind@brevinifluidpower.com

